




60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

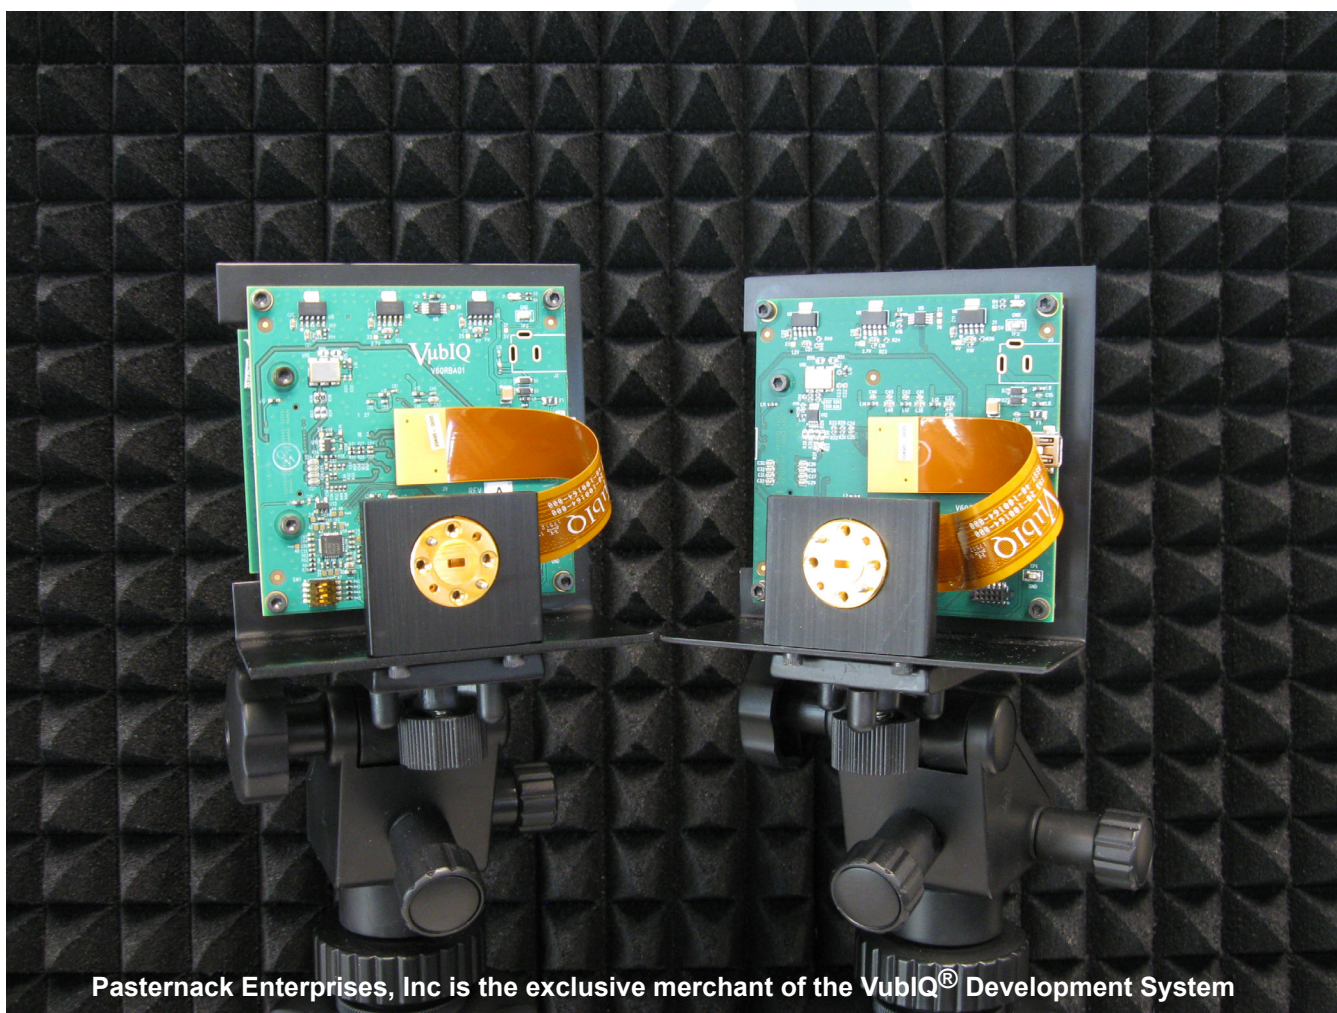

Pasternack Enterprises, Inc is the exclusive merchant of the VubIQ® Development System

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

Datasheets / Software

Data sheets for the Development System and the Transmitter/Receiver waveguide modules are available at:

www.pasternack.com

The specific links are:

User Guide (this document):

<http://www.pasternack.com/images/ProductPDF/PEM003-KIT.pdf>

Development System GUI (1.90):


http://www.pasternack.com/images/ProductPDF/PEM003-KIT_60_GHz_Dev_System_GUI.zip

Transmitter Waveguide Module (PEM001):

<http://www.pasternack.com/images/ProductPDF/PEM001.pdf>

Receiver Waveguide Module (PEM002):

<http://www.pasternack.com/images/ProductPDF/PEM002.pdf>

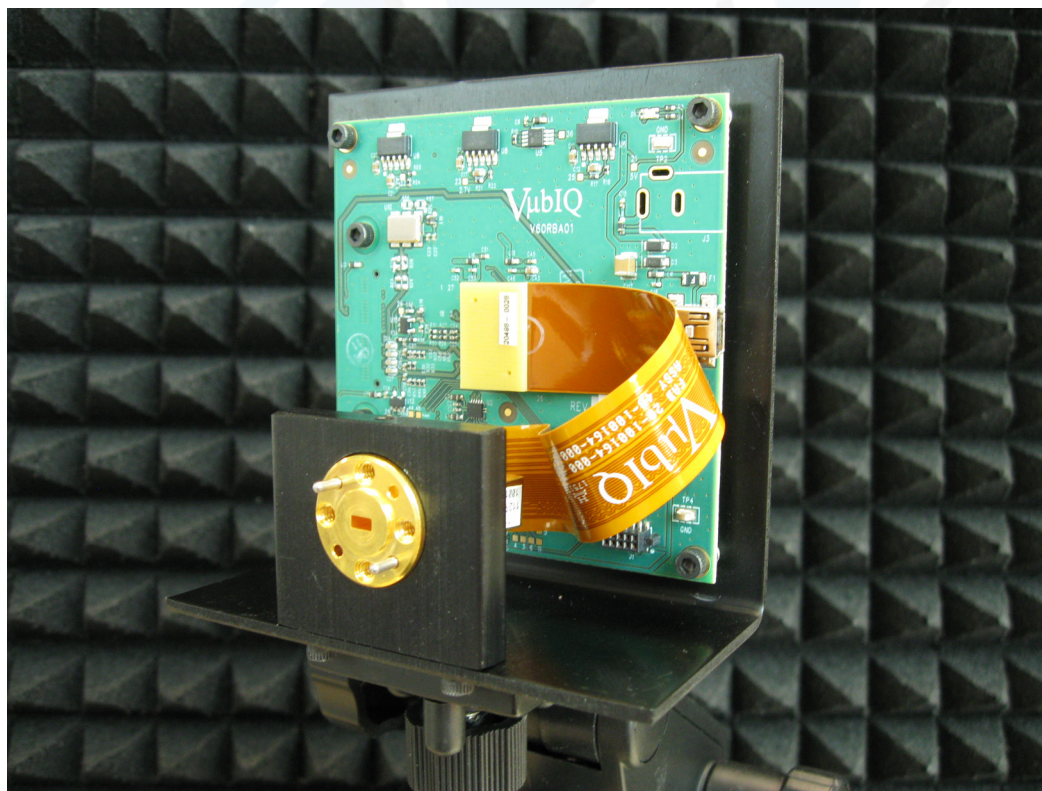

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE


PEM003-KIT

Overview

The PEM003-KIT development system is composed of a millimeter wave transmitter board and receiver board that can be set up and operated using a PC via a simple USB interface on each board. The objective of the system is to enable 60 GHz experimentation and product development focused on the use of an integrated transmitter waveguide module and an integrated receiver waveguide module with standard WR15/WG25 flange interfaces.




Board Assembly on Tripod

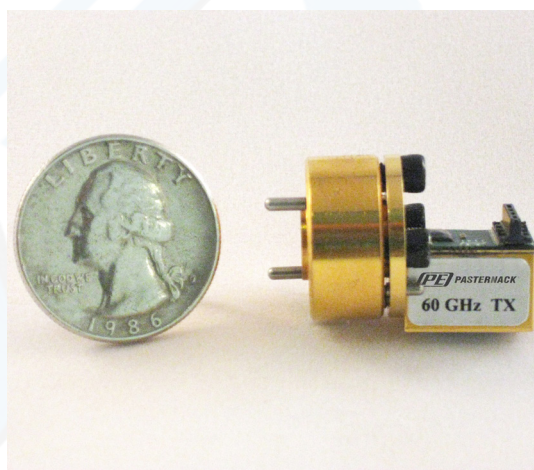

Waveguide Module

Potential applications range from multi-gigabit communications systems such as GigE wireless LAN, 802.15.3c, 802.11ad development, SDI video products, radar, and radiometry. The 60 GHz spectrum is now allocated as unlicensed in many countries world wide.

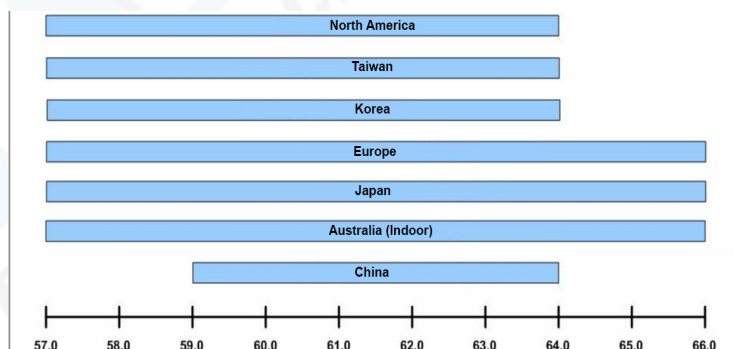

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

International Unlicensed Spectrum Allocation for the 60 GHz Band

Development System Contents

The PEM003-KIT contains the following:

- Transmitter Waveguide Module PEM001
- Receiver Waveguide Module PEM002
- Transmitter board (1)
- Receiver board (1)
- Board/waveguide module mounting bracket (2)
- Bench top tripod (2)
- USB cable (2)
- GUI software (downloadable from web site)
- Documentation and data sheets (downloadable from web site)
- MCX coaxial connector expansion board (2)
- Power Supply (2)
- Phased matched coaxial cables, MCX to SMA (8)

The transmitter and receiver boards are shipped attached to the mounting brackets. The brackets accept a standard 1/4-20 thread fastener for use with included tripods.

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

System Setup / Interconnection

The development system boards communicate with a PC (running the GUI software) using USB as the interface. Each board derives its power from the USB connection (standard operation). The control processor on each board communicates with the PC through the USB port.

Baseband signals are connected via the high speed baseband connector on the rear side of each board. The baseband connector is a Samtec QSE. The mating connector required is a Samtec QTE-020-01-L-D-A. The expansion board mounts onto the Samtec QSE connector and is attached to the main board with the supplied hardware, 2 x 4-40 socket head screws.

The expansion board transitions the QSE connector to a set of MCX coaxial connectors for baseband and optional external reference clock signals (see Figure 1). Also supplied with the expansion board is a set of eight phase-matched cables for baseband test equipment interconnection.



Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

Figure 1 RF Board Rear View with Expansion Board Attached

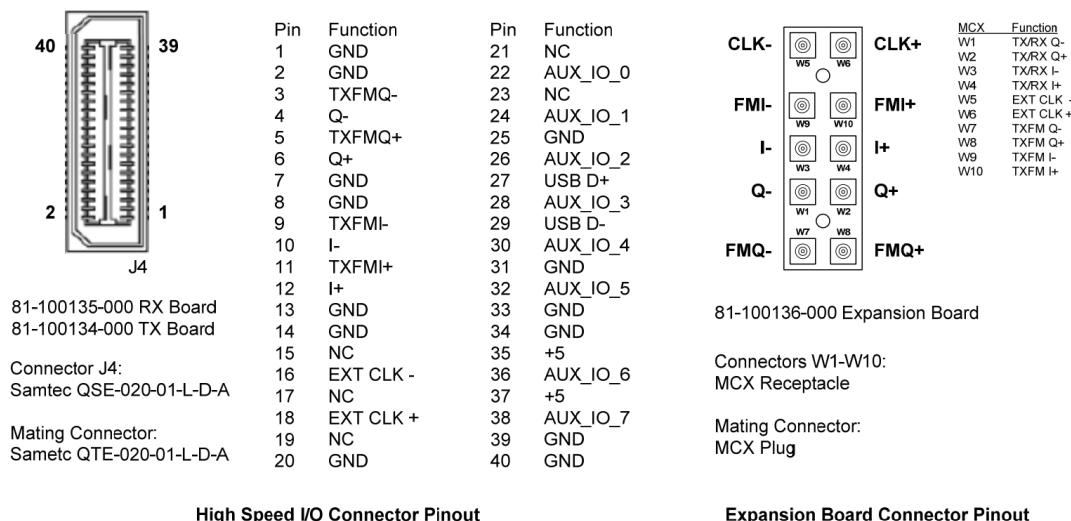


Figure 2 Baseband High Speed Connector and Expansion Board Connectors

Figure 2 shows the pinout of the high speed baseband connector and the expansion board coaxial connectors. For higher level system integration, direct connection via the Samtec high speed connector can be facilitated using the mating Samtec connector as shown.

A typical test set up is shown in Figure 3 below. Here the transmitter baseband source is either a user designed baseband system, or a programmable arbitrary waveform generator (AWG). A two channel AWG can create any form of vector modulation (I and Q baseband) with appropriate programming or selectable standard modulation formats (such as BPSK, QPSK, etc.). The receiver baseband scheme is again either user defined or a signal analysis test system.

By using a programmable AWG for the transmitter baseband source, user defined vector modulation schemes can be created along with various error correction coding, equalization testing, etc. Most AWG products available today work with MATLAB and other tools that provide a convenient method of baseband signal generation.

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

GUI Control Software

As shown in Figure 3, the transmitter and receiver boards are set up and controlled from a host PC running the GUI software. The software can be downloaded using [this link](#) as a ZIP file. Unzip the files and place into a convenient directory on the PC that will be used with the development system test setup. With a transmitter and receiver board connected via the USB cables to the PC, run the software (VubiqGUI.exe). A transmitter window and a receiver window will appear showing the block diagrams. The transmitter board LED will illuminate red, and the receiver LED will illuminate blue.

Each GUI window provides the user with the ability to set up various control parameters for the transmitter and receiver boards. Board voltages and temperatures are also monitored. The window images are shown on the following pages, Figures 4 and 5.

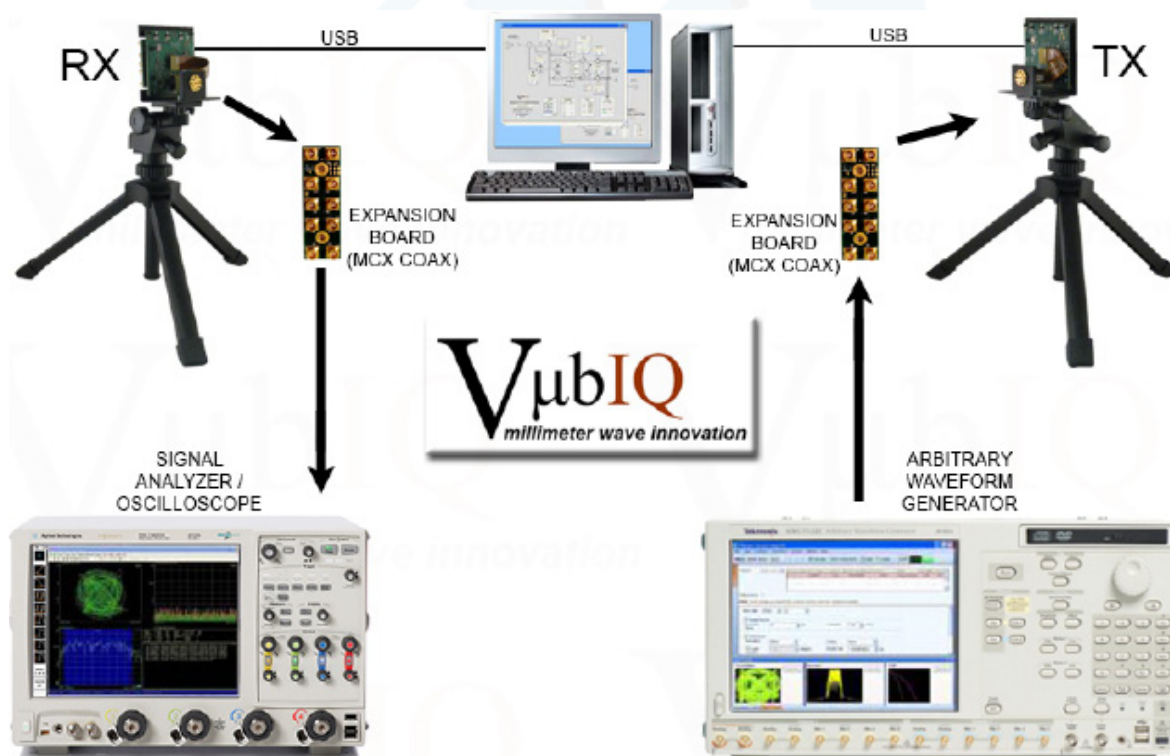


Figure 3 Various Test and Development Scenarios

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

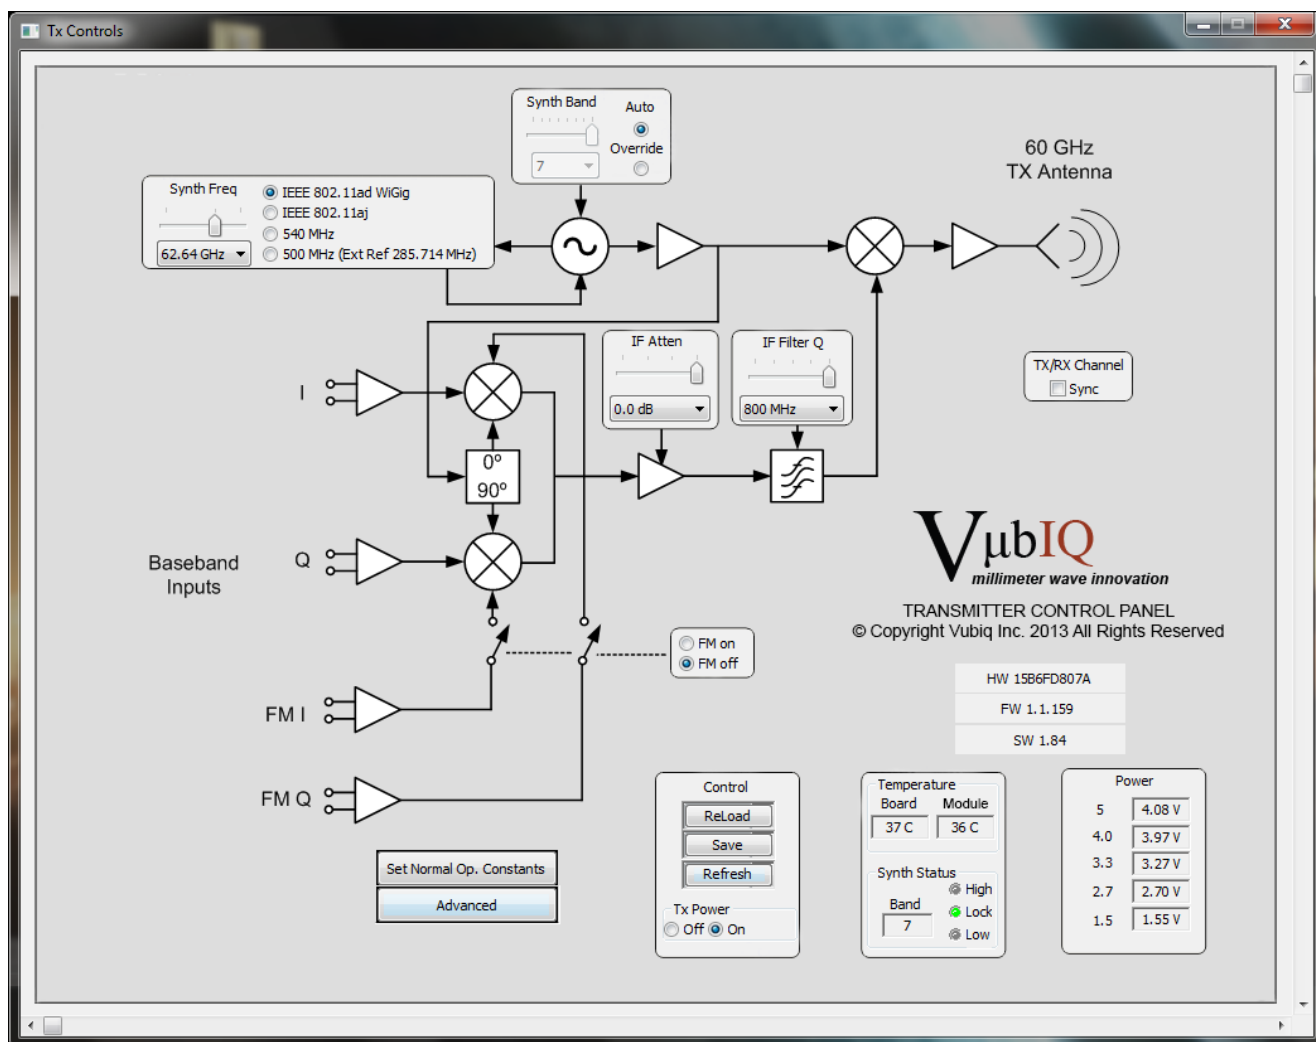


Figure 4 Transmitter GUI Window

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

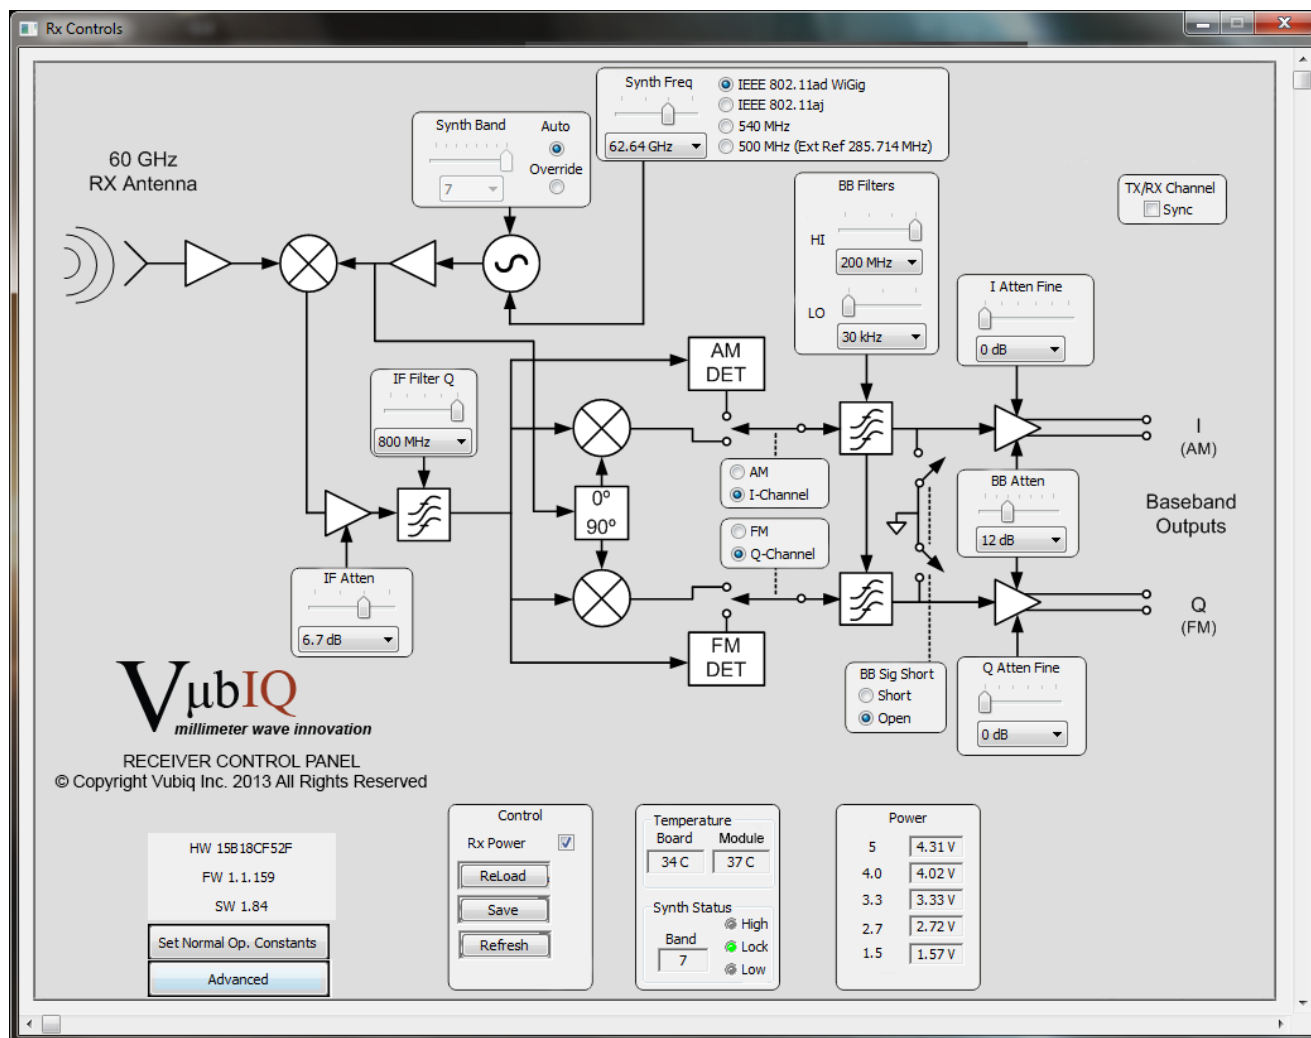


Figure 5 Receiver GUI Window

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System


USER GUIDE

PEM003-KIT

The window layouts are designed as intuitive block diagrams of the transmitter and receiver waveguide module circuits. There are separate boxes for control and monitoring functions. The following chart (Figure 6) shows the transmitter and receiver functions for each box.

| Window Box | TX | RX |
|--------------------------------|----|----|
| Control | X | X |
| Temperature | X | X |
| Power | X | X |
| Baseband | | X |
| Synth Freq | X | X |
| Synth Band | X | X |
| IF Atten | X | X |
| IF Filter Q | X | X |
| FM on/off | X | |
| AM/I-Channel | | X |
| FM/Q-Channel | | X |
| BB Filters | | X |
| BB Sig Short | | X |
| BB Atten | | X |
| I Atten Fine | | X |
| Q Atten Fine | | X |
| Baseband | | X |
| Serial Number/Firmware Version | X | X |
| Set Normal Op. Constants | X | X |
| Advanced | X | X |

Figure 6

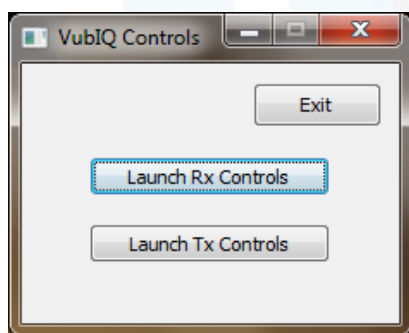

The window shown to the left is used to exit the GUI entirely and is generated when the GUI is initialized from the executable. Disregard the “Launch Rx Controls” and “Launch Tx Controls” buttons as these two windows are automatically launched by GUI initialization.

Click the following link (or enter part number in “SEARCH” on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

Control

Rx Power ☒

Reload

Save

Refresh

The Control box (RX shown) provides basic controls for the board which includes following functions:

- Power on/off for the waveguide module
- Reload parameters from FLASH memory
- Save current parameters to FLASH memory
- Refresh GUI display

Note: upon power up, the last set of parameters saved to FLASH memory are used to configure the transmitter or receiver.

Temperature

| Board | Module |
|-------|--------|
| 32 C | 31 C |

Synth Status

Band ☐ High

6 ☒ Lock

☐ Low

The Temperature/Synth box monitors the board temperature and the RF module temperature in °C. The synth status section indicates the synthesizer lock status and the band tuning status.

Power

| | |
|-----|--------|
| 5 | 4.35 V |
| 4.0 | 3.98 V |
| 3.3 | 3.31 V |
| 2.7 | 2.69 V |
| 1.2 | 1.55 V |

Power supply voltages are monitored in this box. Note: the 5 volt supply is measured from the USB source and typically runs at about 4.1 to 4.4 V.

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

Synth Freq

62.64 GHz

☒ IEEE 802.11ad WiGig
☐ IEEE 802.11aj
☐ 540 MHz
☐ 500 MHz (Ext Ref 285.714 MHz)

The module's operating frequency is set with the Synth Freq box shown above. This control sets the synthesizer digital divisor ratio in the RF module. The standard frequency range can be set from 57.24 GHz to 64.80 GHz in 0.54 GHz steps. Optionally, the RF modules can be set from 57.0 GHz to 64.0 GHz in 0.5 GHz steps with a reference oscillator clock of 285.714 MHz. The synth frequency box has pre-configured frequency subsets corresponding to 802.11ad/WiGig, 802.11aj, or fixed spacing at 540 MHz (optionally 500 MHz). The frequency can be selected with either the slider control or the drop down menu. Occasionally, when selecting a frequency, the module may not respond to the first requested input. This can be remedied by selecting the desired frequency from the drop down menu a second time.

Synth Freq

57.24 GHz

☐ IEEE 802.11ad WiGig
☐ IEEE 802.11aj
☒ 540 MHz
☐ 500 MHz (Ext Ref 285.714 MHz)

57.24 GHz

57.78 GHz

58.32 GHz

58.86 GHz

59.40 GHz

59.94 GHz

60.48 GHz

61.02 GHz

61.56 GHz

62.10 GHz

62.64 GHz

63.18 GHz

63.72 GHz

64.26 GHz

64.80 GHz

Synth Freq

58.32 GHz

☒ IEEE 802.11ad WiGig
☐ IEEE 802.11aj
☐ 540 MHz
☐ 500 MHz (Ext Ref 285.714 MHz)

58.32 GHz

60.48 GHz

62.64 GHz

64.80 GHz

Synth Freq

59.94 GHz

☐ IEEE 802.11ad WiGig
☒ IEEE 802.11aj
☐ 540 MHz
☐ 500 MHz (Ext Ref 285.714 MHz)

59.94 GHz

61.02 GHz

62.10 GHz

63.18 GHz

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)


The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.




60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE


PEM003-KIT

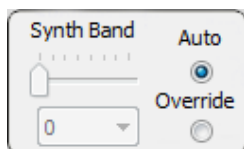


The Synth Band box is typically set in Auto mode, and will track the Synth Freq settings. This box allows separate tuning adjustment of the VCO tank circuit for experimentation (Override Mode).

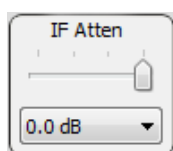


IF Atten box sets the IF attenuation for either the TX or RX board. The lower the attenuation level (in dB), the higher the gain setting. When this control is set to 0.0 dB, the IF gain is at maximum. The slider control or drop down menu can be used; there are 16 settings from 0 dB to 20 dB.

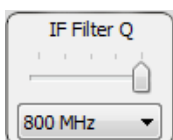

 
The IF Filter Q box is a coarse IF bandwidth control, providing highest Q (narrowest bandwidth) at 800 MHz, and lowest Q (widest bandwidth) at 1.2 GHz. There are 5 settings from 800 MHz to 1.2 GHz.



 
The AM / I-Channel control box (RX only) selects the I-channel demodulator (default) or the AM detector. When the AM detector is selected, its output signal is routed through the I baseband channel.



 The FM / Q-Channel control box (RX only) selects the Q-channel demodulator (default) or the FM detector. When the FM detector is selected, its output signal is routed through the Q baseband channel.



 The FM on/off control box (TX only) activates the additional FM switching modulators in the I/Q modulation stage. When selected, FSK type modulation can be set up by using the FMI and FMQ baseband signal inputs in conjunction with the I and Q signal inputs.



The baseband signals can be removed from the output stages (effectively shorted to ground) using the BB Sig Short box (RX only). This feature may be helpful during testing if no signals are desired (quiet channel) at the baseband outputs.

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

BB Filters

HI

LO

The bandwidth of the two baseband channels can be set with the BB Filters box (RX only). The high frequency roll off selection (HI) is set with either its slider control or the drop down menu (settings at 200 MHz, 300 MHz, 500 MHz and 1.4 GHz). The low frequency roll off selection (LO) is set with either its slider control or drop down menu (settings at 30 kHz, 300 kHz and 1.5 MHz). Note: these filters are very broad, approximately 2nd order Butterworth response.

BB Atten

The BB Atten box (RX only) is used to set the gain of the baseband amplifiers. The lower the attenuation level (in dB), the higher the gain setting. When this control is set to 0.0 dB, the baseband gain is at maximum. The slider control or drop down menu can be used; there are 7 settings from 0 dB to 36 dB

I Atten Fine

Q Atten Fine

There are two attenuators for fine gain adjustment of the I and Q channels, the I Atten Fine and Q Atten Fine boxes (RX only). These provide a convenient method for balancing the I and Q receive baseband levels or for fine adjustment in 1 dB steps. The slider controls or drop down menus can be used to adjust the attenuation in 1 dB increments from 0 dB to 5 dB (6 settings).

Set Normal Op. Constants

Advanced

These two controls, common to the TX and RX, are used to reset the default register data to the RF modules (Set Normal Op. Constants) and to bring up a detailed RF module register screen (Advanced).¹

HW 15B6FD807A

FW 1.1.159

SW 1.90

Each transmitter board and receiver board has a unique serial number (HW). Also, the firmware release version (FW) and the software release version (SW) are shown in the same box.

¹ The Advanced screen provides access to individual data registers for the RF modules. Changing these register values through the Advanced screen is not normally required since the GUI interface provides the most commonly used control functions.

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

Reference Oscillator Source Options

The transmit and receive boards come with built-in low phase noise crystal oscillators that provide the clock reference frequency for the TX/RX synthesizers. The frequency of the on-board oscillator is 308.571 MHz (540 MHz channel spacing) and has a stability rating over temperature of 25 ppm. There may be certain system level applications that require the transmitter and/or receiver to be phase locked to an external source. Also, if 500 MHz channel spacing is desired, the external reference clock must be 285.714 MHz. The TX/RX RF boards are set up to provide the following options for oscillator reference source:

1. Internal, separate crystal oscillators (default)
2. External 308.571 MHz or 285.714 MHz signal source such as a laboratory signal generator (0 dBm typical)
3. Transmitter sourcing the receiver (TX master/RX slave) from the TX on board oscillator

The optional reference oscillator settings are implemented via zero-ohm resistor (or wire jumper) modifications on the TX and RX RF boards as required. The schematics and pictures on the following pages are provided to illustrate the modifications for the desired settings (Figures 7 through 10).

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

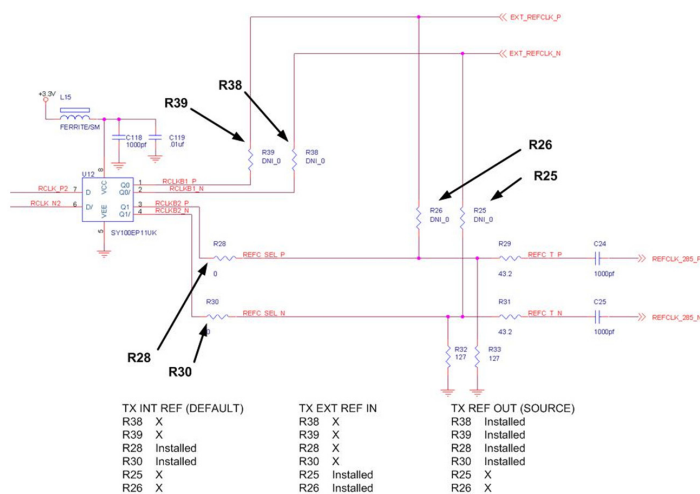


Figure 7 Transmit Board Reference Oscillator Configurations

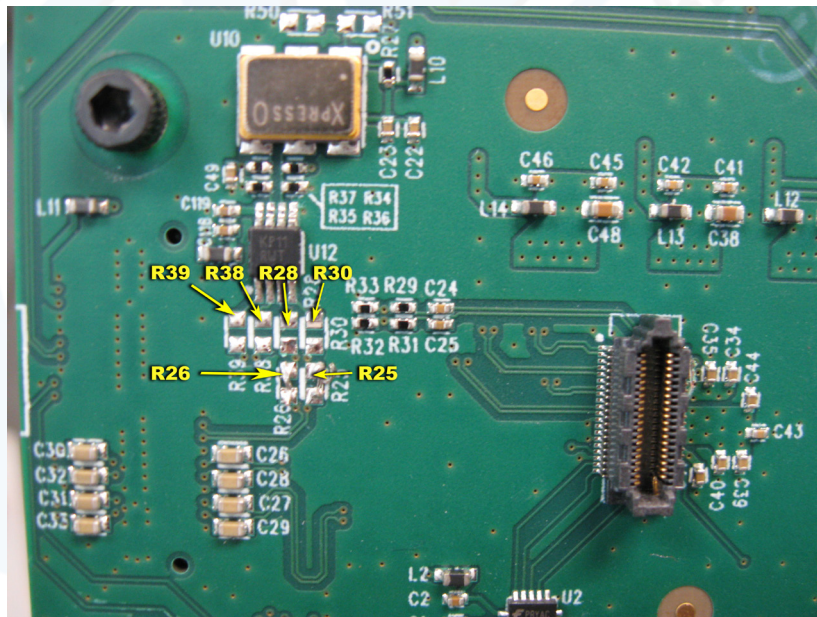


Figure 8 Transmit Board Reference Oscillator Resistor Locations

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

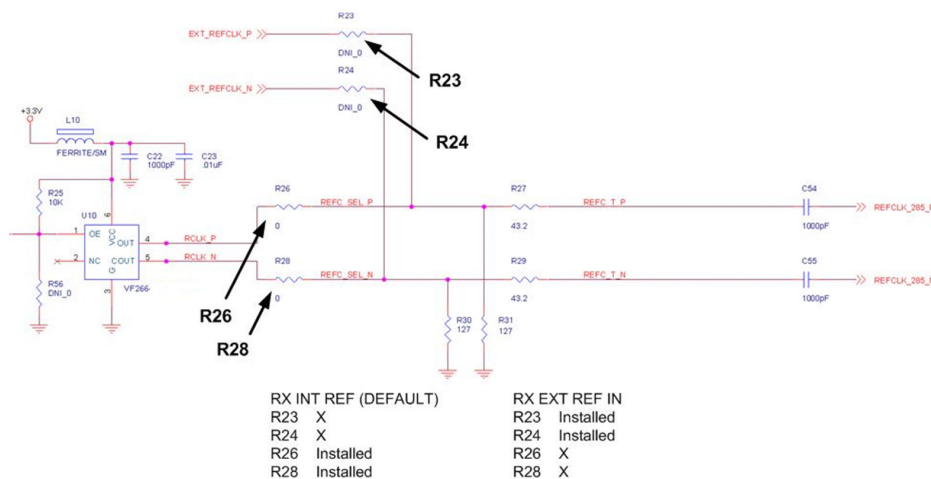


Figure 9 Receive Board Reference Oscillator Configurations

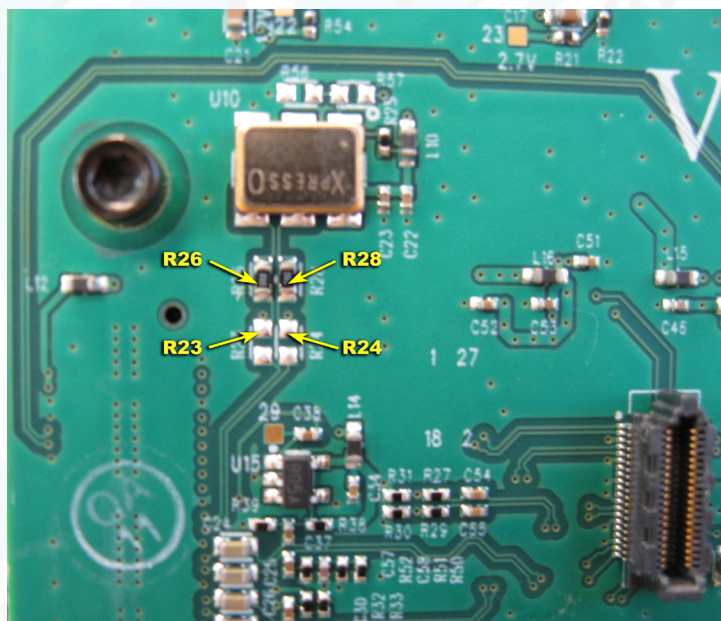


Figure 8 Receive Board Reference Oscillator Resistor Locations

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](#)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.



60 GHz Transmit/Receive (Tx/Rx) Development System

USER GUIDE

PEM003-KIT

60 GHz Transmit/Receive (Tx/Rx) Development System from Pasternack Enterprises has same day shipment for domestic and International orders. Our RF, microwave and fiber optic products maintain a 99% availability and are part of the broadest selection in the industry.

Click the following link (or enter part number in "SEARCH" on website) to obtain additional part information including price, inventory and certifications: [60 GHz Transmit/Receive \(Tx/Rx\) Development System PEM003-KIT](http://www.pasternack.com/60-ghz-test-development-system-pem003-kit-p.aspx)

URL: [http:// www.pasternack.com/60-ghz-test-development-system-pem003-kit-p.aspx](http://www.pasternack.com/60-ghz-test-development-system-pem003-kit-p.aspx)

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Pasternack reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal.